

INSTALLATION INSTRUCTIONS




1. Use the supplied template to mark the areas for grooves cut-out.



2. Use Multi Tool or a Wall Saw to cut the grooves on the drywall. Use Tile Saw with diamond blade for tiles or other hard walls.



3. Test fit the glass shelf before applying the adhesive caulking.

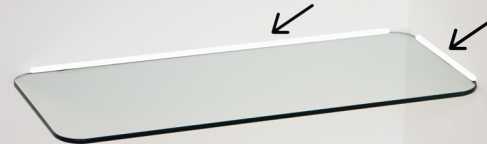

4. Apply solid color paintable caulking and insert the shelf in place. Clean any excess caulking with a damp sponge.